

ATR833-II Factory Setup

These are the recommended parameters for the FUNKE ATR833-II COM radio:

SET Long Press

SPACING = 8.33KHz
DISPLAY = ever on
PTT SELECT = one mic
DUOWATCH = mute 0
EXT AUDIO = auto off
MIC L TYP = auto
MIC L std sens = 7
MIC L dyn sens = 6
MIC R TYP = auto
MIC R std sens = 6
MIC R dyn sens = 6
HEAD OUT = Two
AUTO ON = off

SET Short Press

SQL = 3
VOX = 5
INT = 10
STL = 15
STR = 15
EXT = off
BRT = 9
CON = 5
VOL = 14