

# TRT800H Factory Setup

Transponder has to be programmed only if you want to activate the Mode-S. If not programmed the transponder operate in A/C modes only.

## **To enter in Setup Mode:**

- Set the Transponder in Standby Mode
- Press & hold ID button up to Nr. 25

## **Recommended parameters for the FUNKE TRT800H Transponder:**

- AA: HEX code assigned
- AC: 1A (Balloon)
- FID: Balloon registration
- GND Switch: No
- Speed Cat: 08
- GPS: NMEA
- Remote Header: No